

# CONTROL CENTER

## INSTALLATION INSTRUCTIONS

### Installation instructions


#### Installation of the BIOXYMOP MAX control center

The installation of the control center must comply with a few rules:


- 1- Make sure it is positioned as specified by the project manager, so that it is no more than 10m from the station.
- 2- It must not be located in an area at risk of flooding, and must not pose a danger to the public. It is advisable to have a minimum space of 70cm in front of the cabinet to ensure the safety of operators during intervention.
- 3- The ground must or will be stabilized regardless of the type of installation. The width/length of the foundation must exceed the perimeter of the base dimension by 20 cm. Dig down to 80 cm, make a 5 cm bed with 0/4 aggregate for dry networks, lay the ducts respecting the radius with a 5 cm rise above the top of the base. Fill to 42 cm with the same aggregate. It is important to stabilize by compacting the aggregate, which is the main support base.
- 4- Make sure that the installation bed is level, as this will ensure that the control center doors open properly.



WASTEWATER TREATMENT

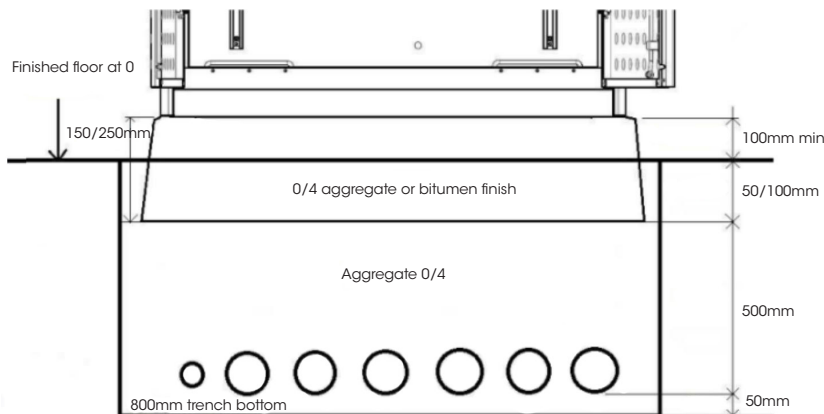

#### Top view

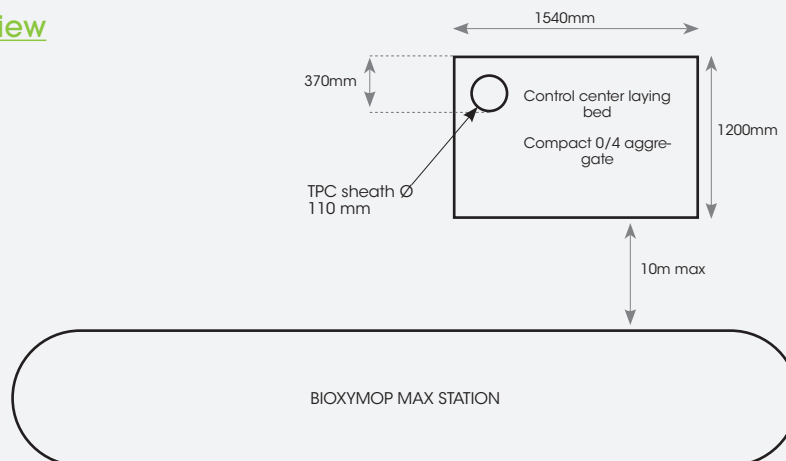

Update 18-1-2024